

Mitsubishi Electric Industrial Robot

SAFETY MANUAL

Applicable models:

- FR series
- CR series



NOTE TO THE USER

- 1. AS FOR THE ASSURANCE OF SAFETY IN DESIGN AND CONSTRUCTION OF ROBOT SYSTEM, READ THIS MANUAL FIRST.
- 2. PLEASE MAKE SURE THAT THIS MANUAL IS DELIVERED TO END USERS FOR THEIR IMPLEMENTATION OF SAFETY.
- 3. DON'T USE ROBOTS IN A POTENTIALLY EXPLOSIVE ATMOSPHERE.
- 4. DO NOT USE ROBOTS IN RESIDENTIAL AREAS.

[•] ANY PART OF THIS PRINT MUST NOT BE REPRODUCED IN ANY FORM WITHOUT PERMISSION.

[•]THIS PRINT IS SUBJECT TO CHANGE WITHOUT NOTICE.

Notes about the Europe Battery Regulation (EU)2023/1542



Note: This symbol mark is for EU countries only.

This symbol mark is according to the regulation (EU)2023/1542 Article 13 Labelling and marking of batteries and Annex VI.

Your MITSUBISHI ELECTRIC product is designed and manufactured with high quality materials and components which can be recycled and/or reused.

This symbol means that batteries and accumulators, at their end-of-life, should be disposed of separately from your household waste.

If a chemical symbol is printed beneath the symbol shown above, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows: Cd: cadmium (0,002%), Pb: lead (0,004%)

In the European Union there are separate collection systems for used batteries and accumulators.

Please, dispose of batteries and accumulators correctly at your local community waste collection/recycling centre.

Please, help us to conserve the environment we live in!

California Code of Regulation "Best Management Practices for Perchlorate Materials"

When any products that contain primary lithium batteries with perchlorate are shipped to or transported through the State of California, they are subject to the above regulation. The following information must be indicated on the package, etc. of the products that contain primary lithium batteries (with a perchlorate content of 6 ppb or higher).

"Perchlorate Material-special handling may apply. See http://www.dtsc.ca.gov/hazardouswaste/perchlorate"

Transportation Precaution

The United Nations' Recommendations on the Transport of Dangerous Goods must be observed for transborder transportation of lithium batteries by air, sea, and land.

The lithium batteries (MR-BAT6V1, Q6BAT, ER6V, 1S1P×2 LS17500, CR2450HR WK) used in Mitsubishi industrial robots contain lithium and fall under the definition.

When the lithium batteries are shipped for storage, etc., they will be classified as Class 9: Miscellaneous dangerous substances and articles. Please contact your transportation company and must provide appropriate transport safety measures as the customer's consignor.

Waste Management

When disposing of this product, it is necessary to give consideration to the effective use of resources, waste handling and cleaning, and the collection and disposal of fluorocarbon. Please dispose of this product according to the waste management law of the country where it is used.

1. Effective Use of Resources

- (1) Please recycle the old product as much as possible.
- (2) For recycling purposes, we recommend disassembling this product into iron scrap and electrical parts, so that they can be sold to appropriate vendors.

2. Waste Handling and Cleaning

- (1) Please try to sell the old product for recycling in order to reduce the amount of waste material.
- (2) When disposing of this product, please do so according to the requirements of the appropriate industrial waste laws
 - Disposing of batteries and used grease by the customer will cause environment contamination.

3. Collection and Disposal of Fluorocarbon

(1) Handle the coolant inside the heat radiation fins used for heat dispersion in the power supply unit (converter unit) and the driving units (inverter unit, amplifier unit) appropriately, according to the designated fluorocarbon collection and disposal regulations.

The applicable products that use fluorocarbon are the following units built in the CR4, CR7, CR8 and CR9 controllers manufactured in or before 2002.

Unit model name	Charged coolant model name
MDS-B-CV-37 to 185	HCFC141b
MDS-B-V1-20 to 45	1101 01415
MDS-B-V1-70 to 90	HCFC123
MDS-B-V2-2010 to 4535	1101 0120

Note: The V1 model includes the V14 and V14L modes, and the V2 model includes the V24 model.

Robot System Safety Precautions

- 1. Be sure to install a safety barrier or enclosure around the robot to eliminate potential dangers in case an operator approached the robot carelessly.
- 2. Implement an interlock such that the door will not open even if an operator attempts to go through the barrier (within the safety area) while the robot is operating, or such that the servo power supply of the robot is turned off and peripheral devices are stopped automatically (the servo power supply is turned off) as soon as an operator opens the door. Connect the line of this interlock signal directly to the robot and peripheral devices without going through a secondary device such as a PLC. In case of our robots, the line should be connected to the emergency stop input terminal or door switch input terminal.
- 3. If a system is configured such that several robots are installed within the safety area, employ a design and structure where each robot and related devices can be operated independently of one another.
- 4. Robot systems should be designed so that the robot controller is installed outside the safety area.
- 5. Install a manual emergency stop switch at a location near the robot where it can be easily operated and connect it to the external emergency stop input terminal of the controller. (Use an always-closed B-contact type with structural lock function conforming to the IEC 60204-1 specification.)
- 6. Configure the system so that the operational status of the robot (i.e. executing program operation, stopped, servo-on status, error status, etc.) can be verified easily from outside using visual status indicators, etc.
- 7. For the safety of all operators in the immediate vicinity, all errors should be accompanied by an audible alert as well as a visual signal.
- 8. Implement external means to manually shut down all power supplied to the robot system.
- 9. Be sure to configure the robot system so that it begins automatic operation on startup. Also, configure the system so that the robot does not resume automatic operation whenever the system is reset.
- 10. Be sure to ground the robot arm and controller to prevent electric shock and electrostatic discharge, improve noise resistance and minimize unnecessary electromagnetic irradiation.
- 11. If an operator must enter the area beyond the barrier (within the safety area) for the purpose of teaching and adjustment, etc. while the servo is turned on, a helmet must be worn. To turn ON robot servos, use the three-position enable switch on the teaching pendant. Ensure that the robot servos can be turned OFF anytime and bodily harm can be avoided before turning ON the robot servos.
- 12. When conducting team work, designate one responsible person, make sure gestures and commands used are thoroughly known and attend to mutual safety.
- 13. Be sure to indicate with hand and voice signals when turning the power supply on, operating electric wiring, and/or operating cranes and other heavy equipment so that everyone involved is alerted and dangerous situations can be avoided.

Sicherheitsmaßnahmen für das Robotersystem

- 1. Um den Roboter herum ist eine Sicherheitsbarriere oder Einfriedung anzubringen, damit bei unbedachter Annäherung an den Roboter potenzielle Gefahren ausgeschaltet werden.
- 2. Eine Sicherungsverriegelung anbringen, die das Öffnen der Tür verhindert, wenn ein Bediener versucht, die Barriere (innerhalb des Sicherheitsbereichs) zu passieren, während der Roboter in Betrieb ist, oder durch die beim Öffnen der Tür die Servo-Stromversorgung des Roboters ausgeschaltet und Peripheriegeräte automatisch angehalten werden (die Servo-Stromversorgung ausgeschaltet wird). Die Leitung dieses Sicherheitsverriegelungssignals direkt an den Roboter und die Peripheriegeräte anschlie§en und nicht an ein Sekundärgerät (z.B. PLC). Bei unseren Robotern sollte die Leitung an das Eingangsterminal des Notausschalters oder Türschalters angeschlossen werden.
- 3. Falls die Konfiguration eines Systems mehrere Roboter im Sicherheitsbereich vorsieht, sollte bei Entwurf und Installation darauf geachtet werden, dass alle Roboter und entsprechenden Geräte unabhängig voneinander bedient werden können.
- 4. Robotersysteme sollten so installiert werden, dass sich der Roboter-Controller au§erhalb des Sicherheitsbereichs befindet.
- 5. An einer leicht zugänglichen Stelle in Roboternähe einen manuellen Notausschalter anbringen und diesen mit dem externen Notausschaltungs-Eingangs-terminal des Controllers verbinden. (Stets einen geschlossenen B-Kontakt mit struktureller Sperrfunktion gemä§ IEC 60204-1 verwenden.)
- 6. Das System so konfigurieren, dass der Betriebsstatus des Roboters (d.h. Ausführungsprogrammbetrieb, Stoppstatus, Servo-Ein-Status, Fehlerstatus usw.) anhand von Sichtanzeigen usw. problemlos extern überprüft werden kann.
- 7. Zur Sicherheit des Bedienungspersonals in unmittelbarer Nähe des Roboters sollten alle Fehler durch Hör- und Sichtsignale angezeigt werden.
- 8. Externe Anlagen implementieren, die die manuelle Ausschaltung der Stromversorgung des Robotersystems ermöglichen.
- 9. Bei der Konfiguration des Robotersystems ist darauf zu achten, dass das System beim Hochfahren automatisch in Betrieb genommen wird. Zudem das System so konfigurieren, dass der Roboter beim Zurückstellen des Systems den Betrieb keinesfalls automatisch wieder aufnimmt.
- 10. Zur Vermeidung von Stromschlag und elektrostatischer Entladung, Verbesserung des Störwiderstands und Verhinderung unnötiger elektromagnetischer Abstrahlung ist auf ordnungsgemä§e Erdung des Roboterarms und Controllers zu achten.
- 11. Falls es erforderlich wird, dass ein Bediener den Bereich hinter der Barriere (innerhalb des Sicherheitsbereichs) zu Schulungs- und Justierzwecken etc. bei eingeschalteter Servo-Versorgung betritt, ist ein Schutzhelm zu tragen. Bei der Teach-In-Programmierung den Servo-Ein-Betrieb so über den Totmannschalter durchführen, dass die Servo-Stromversorgung jederzeit ausgeschaltet werden kann und dass genügend Platz für den Körper des Bedieners besteht, um potenzielle Gefahren zu vermeiden.
- 12. Bei Teamarbeit einen Verantwortlichen bestimmen und sicherstellen, dass Handzeichen und Befehle eingehend bekannt und der gegenseitigen Sicherheit dienlich sind.
- 13. Mit Hand-und Rufsignalen auf das Einschalten der Stromversorgung und/oder Bedienungskräne und sonstiger schwerer Maschinen hinweisen, damit alle Betroffenen alarmiert sind und efährliche Situationen vermieden werden können.

로봇 시스템 안전 예방조치

- 1. 오퍼레이터가 무심코 로봇에 접근 할 경우에 빚어질 수 있는 위험상황을 제거하기 위해 로봇의 주변에 안전 장벽이나 울타리를 꼭 설치할 것.
- 2. 로봇이 가동 중일 때에는 오퍼레이터가 장벽을 (안전공간 내) 넘어가려고 할지라도 문이 열리지 않게할 인터로크를 시행하던지, 아니면 오퍼레이터가 문을 여는 즉시 로봇의 서보 전원장치가 꺼지고 주변장치가 자동 정지 (서보 전원장치 꺼졌음) 되도록 시행할 것. 본 인터로크 신호 선을 2차적인 장치인 PLC 등을 통하지 않고 직접 로봇 및 주변장치에 연결 할것. 우리 로봇일 경우, 선은 긴급정지 입력 터미널이나 문 스위치 입력 터미널에 연결되어야 함.
- 3. 로봇이 여러 대 안전공간 내에 설치되도록 시스템이 형성되어 있는 경우에는 각 로봇 및 관련장치가 각각 독자적으로 가동될 수 있는 디자인 및 구조를 고용할 것.
- 4. 로봇 시스템 디자인은 로봇 제어장치가 안전공간 밖에 설치되도록 고안되어야 한다.
- 5. 수동적 긴급정지 스위치는 로봇을 가동하기 수월한 로봇 가까이에 설치하고, 제어장치의 외부 긴급정지 입력 터미널에 연결 할 것 (IEC 60204-1 사양에 준수하는 구조적 자물쇠 기능을 가진 항상 닫혀있는 B-접촉식을 사용 할 것.)
- 6. 로봇의 가동상태 (즉, 프로그램 가동 실시, 정지, 서보-ON 상태, 오류 상태, 등등.)가 밖에서 시각적 상태 지시기 등을 통하여 쉬이 확인될 수 있도록 시스템을 형성할 것.
- 7. 로봇에 인접해있는 모든 오퍼레이터의 안전을 위하여, 모든 오류는 귀에 들리는 경보 및 시각적 신호를 동반해야 한다.
- 8. 로봇 시스템의 모든 전원장치를 수동적으로 끌수 있는 외부적 수단을 실행할 것.
- 9. 시동 시에는 반드시 자동으로 가동 되도록 로봇 시스템을 형성 할 것. 단, 시스템이 리셋 될 때에는 계속해서 자동가동이 되지 않도록 시스템을 형성 할 것.
- 10.전기쇼크 및 방전 예방, 잡음저항 상 개선, 그리고 불필요한 전자석의 발광을 최소화하기 위해서 로봇의 팔과 제어장치를 반드시 접지 할 것.
- 11. 서보가 켜있을 때 교시 및 조절등의 목적으로 오퍼레이터가 장벽 내로 (안전공간 내) 들어가야만 할 경우에는 철모를 써야만한다. 서보 전원장치를 언제든 속히 끌수 있으며 오퍼레이터의 몸이 잠재적 위험을 회피할 수 있는 충분한 공간이 갖추어졌을 때는 교시 펜던트 내의 deadman 스위치로 서보 ON 작업을 할 것.
- 12.팀 작업 시에는 책임자를 지명하며, 반드시 사용하는 몸짓 및 명령이 완전히 이해되도록 하여서 상호 안전에 주의 할 것.
- 13. 전원장치를 킬 때, 전기배선을 가동할 때, 그리고/또는 크레인 및 다른 중장비를 가동할 때에는 반드시 손과 음성으로 신호하여서 모든 관련 인이 경보를 받고 위험상황을 회피할 수 있도록 한다.

机器人系统安全预防措施

- 1. 务必在极器人四周安装安全围篱或保护圈,以防止操作员不小心接近 机器人而造成潜在伤害。
- 2. 装配互锁(inter lock),因此即使操作员试图在机器人操作期间穿越围篱(在安全区域内),门也不会打开,或在操作员一打开门之后,机器人的 伺服器电源系统将关闭,周边设施也会自动停止(伺服器电源系统已关闭)。将此互锁的信号线直接连接在机器人及其周边设施上,不需经过如 PLC的第二个设施。以我们的机器人来说,此线应该要连接到紧急停止输入端子或者连接到门的开关输入端子。
- 3. 如果系统的配置是将若干机器人安装在安全区域之内,则必须使用另一种设计或结构,使每个机器人及其相关装置能够被分开独立操作。
- 4. 机器人系统的设计应将机器人控制器安装在安全区域之外。
- 5. 在机器人的附近安装一个手动的紧急停止开关,该地点必须要能方便操作并能连接到控制器的外部紧急停止输入端子。 [使用符合IEC 60204-1 规定,具有结构锁功能的"永久关闭,B-接触型"(always-closed B-contact type)。]
- 6. 系统的配置必须要使机器人的操作状态(例如执行程序操作、停止、伺服器开启状态、错误状态等等)能够很容易地从外部利用目视的状态指示器加以确认。
- 7. 为了保障临近操作人员的安全,所有的错误必须要有发出声音的警告以及可看见的信号。
- 8. 在外部装设能以手动方式关闭机器人系统所有电源的装置。
- 9. 务必进行机器人系统配置,以便它在启动时能开始自动操作。此外,配置系统,使机器人在系统重设时不会回复自动操作。
- 10. 务必将机器人的手臂以及控制器接地,以防止电击以及静电放电的现象,并尽可能消除噪音,尽量减低不必要的电磁辐射。
- 11. 如果操作人员为了教学或调整等原因必须进入围篱内部(安全区域内),当伺服器开启时,必须戴安全帽。必须在伺服器电源可随时停止,而且操作人员的身体有足够的活动空间避免遭遇潜在危险的情况下,经由教学指示条中的"无人开关"(deadman switch)来进行伺服器开启的操作。
- 12. 团队一起工作时,务必指派一位负责人员,确保每个人完全了解所使用的手势与命令并注意彼此的安全。
- 13. 开启电源、操作电线装配及(或)起重机,以及其它重装备的时候,务必利用手势与声音发出信号,使每一位参与人员都能保持警觉,避免危险情况的发生。

Revision history

Date	Specifications No.	Details of revisions
2017-05-22	BFP-A3541	· First print
2018-03-01	BFP-A3541-A	Environmental conditions of electromagnetic noise was modified.
2019-04-19	BFP-A3541-B	Updated "NOTE TO THE USER". Additional precautions for overhead installation was added.
2019-07-18	BFP-A3541-C	Correction of figures. (Appendix Fig.7-1, 6)
2020-10-30	BFP-A3541-D	Added the battery (ER6V). Corrected other mistakes and changed some sections.
2021-03-30	BFP-A3541-E	Added information on California Code of Regulation "Best Management Practices for Perchlorate Materials".
2021-09-30	BFP-A3541-F	 Corrected the explanation of electromagnetic noise in "1.2 Operating environments". Corrected other mistakes and changed some sections.
2022-01-31	BFP-A3541-G	Corrected other mistakes and changed some sections.
2023-04-17	BFP-A3541-H	 Corrected "2.3.6 Emergency stop". (IEC204-1→IEC 60204-1) Other mistakes were corrected and some sections were changed.
2023-09-14	BFP-A3541-J	 Added the battery (1S1P×2 LS17500). Added examples of safety measures for the CR860 controller. Added the caution symbols for hot surface and pinch points and the no stepping warning symbol in "Supplementary explanation of symbols".
2024-02-09	BFP-A3541-K	Added the RV-CR series. Corrected other mistakes and changed some sections.
2025-01-31	BFP-A3541-L	Added precautions for transportation of the lithium battery "CR2450HR WK". Corrected other mistakes and changed some sections.

*Introduction

Nowadays, industrial robots have been widely introduced to many production lines and are estimated to increase more and more in the future. This is owing to many merits of industrial robots that conventional machines don't possess. Industrial robots, in place of human, can do elaborate jobs without saying. They can also continue to work in hazardous conditions for human without taking a rest.

On the contrary, industrial robots could act peculiar hazards against human if sufficient precautions were not provided. Industrial robots may give rise to hazards of injuring operators or damaging equipment.

We who have given created them must do our best to make them work safely to prevent such accidents. However, after they are shipped, safeguarding measures must be taken by the system integrators and/or the end users as well. This manual is intended to give general precautions and safeguarding to secure safety of all persons who are involved in the robots. Before introduction, installation, arrangement and so on of the robots, please read through this manual as well as the operation manual of the robot itself to be able to operate them safety and efficiently.

The fundamental idea of this manual bases on the following 'EU directive' and 'International standard', provisions of which are cited frequently through this manual. Refer to these documents if necessary.

- Machinery directive: 2006/42/EC
- ISO 10218-1:2011 Robots and robotic devices Safety requirements for industrial robots Part 1:Robots

Applicable Models

This manual is targeted for the following model series.

- FR Series
- CR Series

- No part of this manual may be reproduced by any means or in any form, without prior consent from Mitsubishi.
- The contents of this manual are subject to change without notice.
- This is the original document.
- Ethernet is registered trademarks or trademarks of Xerox Corporation in the United States.
- All other company names and production names in this document are the trademarks or registered trademarks of their respective owners.

Copyright(C) 2017 MITSUBISHI ELECTRIC CORPORATION

Contents

Pa	ge
Fundamental concept of safety measures	
1.1 Purpose, application	[-1
1.2 Operating environments	I-1
(1) Power supply	 -1
(2) Electromagnetic noise	
(3) Static electricity	
(4) Temperature, humidity	
(5) Atmosphere	
(6) Liquid	
(7) Vibration	
(9) Air pressure	
1.3 Safeguarding	
1.3.1 Prevention of hazards in automatic operation1	
1.3.2 Safeguarding in programming	
1.3.3 Safeguarding in maintenance and trouble shooting	
1.3.4 Verification of safety before starting operation	
Safety considerations in each operation	2-6
2.1 Unpacking	
2.2 Carrying	
2.3 Preparation of installation and operation 2	
2.3.1 Robot arm, controller and control panel	
2.3.2 Cables	
2.3.3 Hands	
2.3.4 Teaching pendant	2-9
2.3.5 Grounding	2-9
2.3.6 Emergency stop	
2.3.7 Safety stop	
2.3.8 Indicators	
2.3.9 Isolation of power sources	
2.3.10 Applying power	
2.4 Teaching and programming	
2.5 Program verification	
2.6 Automatic operation	11
2.7 Maintenance	12
2.8 Trouble shooting	13
2.9 Modifications	13
2.10 Disposal	
Safeguarding	14
3.1 Safeguard	14
3.2 Awareness means	
System documentation 4-	15
Taratistic in	4 =
Training4-	15
Degree of danger and damage, and indications	15
Remedies of failures and actions to take in an emergency	16
7.1 Prohibition of use in a faulty or abnormal condition	
7.2 Actions to take in an emergency	16
Examples of safety protection device configuration	17

Contents

	Page
Appendix 8-1: Safety protection device configuration methods	Appendix-17
(1) Stop functions	Appendix-17
(2) Safety protection functions	
(3) Safety protection measures	Appendix-18
Appendix 8-2: Examples of safety protection device configuration	Appendix-19
(1) Examples of safety measures (CR800 controller)	Appendix-19
(2) Examples of safety measures (CR860 controller)	Appendix-26

1 Fundamental concept of safety measures

This section explains the fundamental concept of safety that should be under stood by all persons who use robots.

1.1 Purpose, application

We have developed industrial robots to contribute to economic activities, human health and safety by improving productivity, flexibility, and quality of manufacturing industry, as well as by securing safety in hazardous operation.

Therefore, we request users to understand our intention and never to make use of robots for purpose against above intention.

Typical applications of robots in manufacturing industry have included, for example, parts assembling, testing, machining, loading and unloading palletizing, sealer dispensing, painting, soldering brazing and deburring. In other applications such as education, and even amusements, robots are now being used. However, applications of robots will not be limited to those above. If you make a use of a robot in a new application, particular attention should be paid in order to assess the risks on your own responsibility, because a different application may involve different hazards and different levels of risks. (e.g. handling of explosive or flammable material, harmful laser light beam, radioactive ray, poisonous chemicals, and biologically harmful microbe.)

1.2 Operating environments

The operating environments of a robot can affect its lifetime, function, performance, and safety. If the operating environments of a robot do not satisfy the following conditions, appropriate means should be taken to prevent the robot from being exposed to such undesirable conditions. Operating environments differ depending on the robot type. Refer to "Working environment" in the Standard Specifications Manual to use robots in an appropriate environment.

(1) Power supply

- 1) The line voltage must be within ±10% of the rating.
- 2) The duration period of an instantaneous power failure must be within 20 milliseconds.
- 3) The power supply must provide enough electricity needed at the maximum consumption. [Recommendation]......a larger transformer; a stabilized power supply; an UPS.

(2) Electromagnetic noise

- 1) Where a surge voltage exceeding 2000V, 5kHz (equivalent to EN 61000-4-4) may be applied on the primary voltage.
- 2) Locations where a strong electric field or magnetic field exists, such as near large inverters, high output frequency oscillator, large contactors and welding machines.

[Recommendation]...... a noise-cut transformer; a noise filter; reinforcement of ground lines and electromagnetic shields; isolation by keeping away from noise sources; reduction of noise level of emission.

This product has undergone EMC testing for products intended for use in industrial environments (tested to standards EN 61000-6-2 and EN 61000-6-4). This product is not intended to be connected to residential, commercial, or light-industrial power supplies.

(3) Static electricity

1) Where static electricity exceeding 4kV could be directly applied on the robot body or controller. Or where static electricity exceeding 8kV could be applied through airborne electrical discharge. [Recommendation]...... prevention from storing static electricity; discharging of static electricity

(4) Temperature, humidity

- 1) The ambient temperature must be within the rated range. (not less than 0°C and not more than 45°C, not less than 0°C and not more than 40°C for open cooling structure)
- 2) The robot must be kept away from direct sunlight and any heat source.
- 3) The relative humidity must be within the rated range. (not less than 40% and not more than 85%, noncondensing)

[Recommendation] a local heating or cooling equipment; a heat-resistant jacket; isolation by keeping away from a heat source;

> NOTE: Countermeasure is needed against static electricity in low humidity and dewdrop in high humidity.

(5) Atmosphere

- 1) No dust, no oil mist, and no corrosive gas must be contained in the atmosphere.
- 2) No metal shavings and conductive material must scattered.
- 3) No combustible and explosive gas must be contained in the atmosphere.

[Recommendation] The oil mist proof types are recommended. Use the dust or an oil mist resistant jacket.

> NOTE: Never use robots in a combustible or explosive atmosphere. Install the controller in a shielded enclosure if used in a bad atmosphere, as the controller itself has openings for cooling.

(6) Liquid

- 1) Water and other liquid must not splash a robot and a controller directly.
- 2) Any portion of a robot and a controller must not be dipped in water and other liquid.

(7) Vibration

- 1) The vibration and shock must be 3.5G at maximum during transportation.
- 2) The vibration and shock must be 0.5G at maximum during normal use. [Recommendation] Enforcement of rigid packing and shock absorbing

(8) Radioactive ray

1) The radioactive ray must not be more than a permitted level of ordinary person. [Recommendation] isolation from and of a radioactive source

(9) Air pressure

1) The height above sea level should not be more than 1000m. The robot can not work in vacuum. [Recommendation] giving pressure to reach to 1 atmosphere

1.3 Safeguarding

1.3.1 Prevention of hazards in automatic operation

If the operation of an industrial robot can give rise to hazards of impact, trapping, or flying objects released by the gripper, methods for protection of person(s) must be taken using fixed guards or fences.(see Fig. 1-1) It is obvious that if an operator does not enter into a safeguarded space, no hazard of impact nor trapping will occur. Therefore, the separation of any person from any robot by creating a safeguarded space and a restricted space is one of the fundamental principles of safeguarding.

In other words, the principle prohibits a person from entering the safeguarded space during automatic operation. Further, the interlock must be installed so that the guard remains locked closed or opening the guard gives a stop instruction during automatic operation.

In addition to a guard and a fence, a presence sensing device that detects any intrusion into a space, or awareness means that provides a signal to persons of an approaching or present hazard may be used.

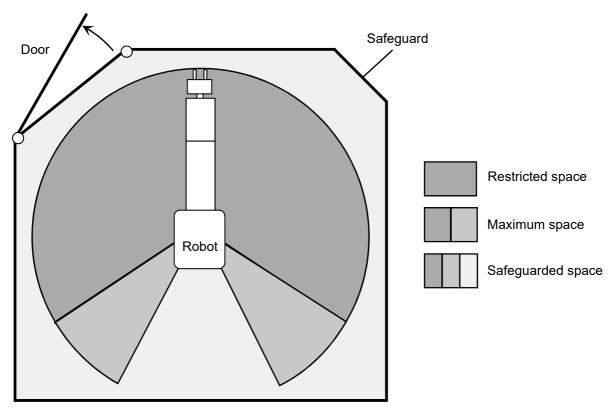


Fig.1-1:Example of restricted space and safeguarded space

Definitions in above figure

Limit region : Max. region limited with mechanical stoppers, etc.

: Max. movement region of robot, including hand installed on end, etc. Max. region

: Region protected with safety fence, including limit region Safety protection region

1.3.2 Safeguarding in programming

Some maintenance and programming personal are at times required to be within the restricted space while power is available to the machine actuators for teaching, program verification, maintenance, and trouble shooting.

On the other hand, it is recognized that operational characteristics of robots can be significantly different from those of other machines and equipment. Robots are capable of high energy movements through a large volume beyond the base of robots. The pattern and initiation of movement of the robot arm are difficult to predict and can vary because of variables in product and environmental conditions.

Therefore, the elimination of hazards or at least their reduction must be carried out during interventions in the safeguarded space while power is available to the machine actuators. Accordingly, a design of the robot system such as to allow the maximum number of tasks to be performed from outside the safeguarded space must be involved. However, if some task requires personnel to be within the safeguarded space, provision of compensatory means of safety must be taken instead of suspending safeguards.

If several robots are installed in a safeguarded space to constitute a certain system, each robot and device must be designed and installed so that each can be controlled independently.

An example of an interference mistake by the robot and peripheral device such as the workpiece, which may occur easily during teaching, is shown for reference in Fig. 1-2. Here, (A) is interference during movement with joint interpolation, (B) is interference caused by an incorrectly set movement destination position No., and (C) is interference caused by an incorrect hand grip open/close setting.

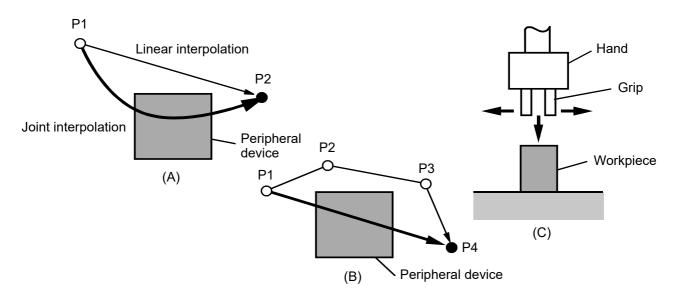


Fig.1-2: Example of work mistake during teaching

1.3.3 Safeguarding in maintenance and trouble shooting

When entering the safeguarded space for inspection, repair, cleaning, and maintenance, be sure to stop the robot and shut down the power supply with placing a lock and/or tag on the energy isolating device to prevent unwilling operation. When an intervention within the safeguarded space while power is available to the robot is required, appropriate safe working procedures must be used to prevent a sudden motion of a robot and a careless operation of person.

The smell from grease that has been used for a long time may cause discomfort. Repair and lubricate the robot in a well-ventilated area. Do not put your face close to drained grease or the lubrication ports as they emanate an acrid smell.

1.3.4 Verification of safety before starting operation

Prior to the use in normal operation, ensure the proper operation of the robot and the robot system. If any damage or malfunction that may lead to an accident is found, required corrections must be completed and retesting must be performed.

Be sure that all system emergency stop devices remain functional.

2 Safety considerations in each operation

This section refers to the general precautions in each operation from unpacking to trouble shooting of robot system. Prior to the actual use of a robot, be sure to read relating items in the attached operation manual together with this safety manual.

2.1 Unpacking

- (1) The robot and the controller are packed separately in a corrugated cardboard for shipment. Be sure to obey the unpacking procedure indicated outside the corrugated cardboard.
- (2) When taking the robot out of shock absorbers, never hold resin covers. If you hold these covers, they may be damaged.
- (3) Keep the used corrugated cardboards and the used shock absorbers for the secondary transportation in future.

2.2 Carrying

- (1) Confirm the weight on the rated nameplate before transporting the robot arm.
- (2) If the robot arm weighs 30kg or less, two workers must carry the robot while holding the unit at the bottom. If transportation handles are provided, use these handles when transporting. Always leave the robot arm fixing plate installed during the transportation work. Moreover, be careful not to get your hand or foot pinched.
- (3) When transporting the robot arm, prepare even-length wires that can sufficiently withstand the robot weight. Pass these wires through the designated eye bolts, and suspend the robot with a crane. Always leave the robot arm fixing plate installed during the transportation work.
- (4) When putting the robot or the controller on an installing base or a pushcart, don't apply an excessive shock and an excessive vibration to the robot and the controller.
- (5) When transporting the robot after installed, be sure to release brakes of the robot arm and from the pose the same as the shipping pose. Don't carry or transport the robot with its arm extended.
- (6) When putting the robot on an installing base temporarily, fix the robot with one or more bolts to prevent from falling down.
- (7) When transporting the open cooling structure controller, as a general rule, two workers must insert their hands into the clearance at the bottom from the front side and back side. Make sure that excessive force is not applied on the switches, terminal block, connectors, or heat radiating fin, etc.
- (8) Many resin covers are used on the exterior surface of the robot. Never hold these parts and never apply forces to them. If you carry the robot by holding these covers, that may cause hazards of damaging covers and eventually dropping the robot.
- (9) Before transporting the robot, the arm fixing plate must be installed.

2.3 Preparation of installation and operation

2.3.1 Robot arm, controller and control panel

- (1) When installing the robot arm, secure the area required for the work based on the layout design before-hand. At the same time, provide a sufficient clearance so that the robot's movable sections and periphery do not catch or collide. If the robot requires the origin to be set, make sure that there is no interference with the periphery in the origin setting posture. For further information on clearance requirements, refer to ISO 13854:2017, ISO 13857:2019.
- (2) If the limitation of range of motion is required by the plan, please consult with us in advance. Only the range of J1 axis can be limited at some fixed points. Alternative method of limiting the range of motion may be provided only if they are designed, constructed, and installed to achieve the same level of safety as the mechanical stops. This may include using the limit switches according to IEC 204-1.
- (3) Install the controller and control panel starting device where the entry of operators in the safety protection region (inside the safety fence) can be confirmed from the operator control position. Otherwise, design the system so that a warning signal is given when the robot starts moving. Moreover, take safety precautions to allow a person in the safety protection region (inside the safety fence) to prevent the machinery from starting up.
- (4) If the working areas of robots overlap each other, provide interlock functions to prevent the robots from simultaneously entering their common area. (position detecting switches, etc.)
- (5) When the safeguarding methods are not in place prior to commissioning and functional testing, interim means of designating the restricted space must be in place before proceeding.
- (6) When it is intended that operators will perform manual operations associated with the robot, such as loading and unloading of parts, this must be taken into account in the arrangement of the robot system, either by providing loading devices so that the operator cannot access the hazardous area, or by providing appropriate safeguards for the manual activity.
- (7) Securely fasten the robot to the robot to the specified installing surface with four fastening bolts being careful to prevent deviation of the position. When installing robots overhead, make sure the robot is fixed securely with bolts to prevent it from falling. The installing base requires enough stiffness to withstand the weight of the robot and the reaction force.
- (8) Remove the arm fixing plate before operating the robot.
- (9) When using ceiling suspension or wall hanging installation methods, a jig allowing use of a standard lift, etc., is available from Mitsubishi. Please consult with your dealer for more information.
- (10) Install the controller outside the safety protection region (outside the safety fence). Install the controller's operation panel so that the operator can monitor the robot without facing his/her back to the robot, and at a height where the panel can be operated easily. (For maintenance workability, set the operation panel height at 0.6m or more.)
- (11) Install the controller on a level surface. Be sure not to prevent the heat fin from radiating heat and the fan from ventilating hot air. The ambient temperature of the controller must be within the rated range.
- (12) To fix the CR800 controller to prevent from falling, moving, etc. due to external vibration, always fix on the base surface. (Do not remove the rubber legs.) To fix the CR860 controller, always use anchor bolts or the like.
- (13) When installing the robot, the controller and the peripheral equipment, take means of access into account to allow access in safety to all areas used for production, adjustment and maintenance operations.
- (14) Do not get on or hang from the robot.
- (15) Do not get on or place heavy objects on the controller.
- (16) Make sure that foreign matter does not enter the robot arm or controller. Entry of conductive matter such as screws or metal pieces, or the entry of flammable matter such as oil could lead to ruptures or damage, etc.
- (17) Be careful not to get your hand or foot pinched during installation of the robot arm, controller, or control panel.

2.3.2 Cables

- (1) Tighten the connectors of the cables between the robot and the controller according to the instructions of the manual.
- (2) Don't pull or bend the cables with force. Protect the cables with ducts or covers if necessary.
- (3) When installing ducts or covers, means should be taken to prevent persons from stumbling, and caution signs should be indicated necessary.
- (4) Keep the robot machine cables and the external I/O cable away from other cables such as power cables and earth lines. Be sure that the external I/O cable is shielded. Only apply voltages that are specified in the Instruction Manuals to terminals. Otherwise, the terminals will be damaged.
- (5) Do not mistake the terminal connections. Doing so may lead to ruptures, damage, burning, etc.
- (6) Do not mistake the polarity (+, -). Doing so may lead to ruptures, damage, burning, etc.
- (7) When moving the robot on a slide rail, never use standard machine cables of the robot due to the poor resistance against bending. In this case, be sure to use flexible machine cables of the robot prepared as options.
- (8) Before connecting the power source line, be sure that the voltage of the power is within the rated range and the power switch of the controller is off. Then connected to the correct portion.
- (9) Do not connect or disconnect the cables or connectors while the power is ON.

2.3.3 Hands

- (1) When using the optional motor-operated hand or the pneumatic hand, follow the instructions of the manual. Ensure that the total weight of the workpiece and devices attached to the forearm is within the rated load.
- (2) If necessary, attach the specially machined picking tool to the end of the hand according to the shape of workpieces. Be sure that the tool has no sharp edges nor projections except functionally neces-
- (3) When attaching customer-made hands, ensure that the total weight of the workpiece and devices attached to the forearm is within the rated load. Especially, when fixing an unbalanced hand, the rated torque of the wrist axes should also be taken into account.
- (4) When attaching a customer-made hand to the flange of the robot, size it securely with specified bolts. Be sure that the hand has no sharp edges nor projections except functionally necessary portions, and provide covers and other protections as necessary.
- (5) If cables and hoses are connected to the hand, prevent cables and hoses from getting twisted round or damaged and from restricting the motion of the robot.
- (6) When using a pneumatic hand, supply clean air which pressure is within 0.7MPa[7kgf/cm²] as the pressure higher than this may lead to a breakage of the internal pneumatic pipe in the robot arm.
- (7) If there is the possibility of a hand releasing a workpiece during motion thus causing a hazardous conditions, necessary means should be taken for the gripping mechanism of the hand to prevent such hazards.
- (8) Unintentional opening or closing of the hand may result in falling of the workpiece in the hand. To prevent this problem from happening, set the hand open/close operation delay time (HNDT) as required. For information on the hand open/close operation delay time (HNDT), refer to "Operation parameter" in the "Instruction Manual/Detailed explanations of functions and operations".
- (9) When power supply to the hand or robot is shut off, unexpected hand operation may occur. The hand must be designed and constructed so that power failure does not cause release of the load or result in a hazardous condition.
- (10) The hand must be designed and constructed so that power failure does not cause release of the load or result in a hazardous condition. To keep the opening or closing state of a pneumatic hand even when the electric power fails, make use of a double solenoid to control the hand.
- (11) Grasping a workpiece charged with static electricity could cause malfunctioning due to electrical-discharge through the hand and robot arm. Thus, always use an insulated structure for the hand and robot arm. When a charged workpiece is placed, the device on which is it placed could malfunction due to the electrical-discharge. Always structure the system so that the charged workpiece's charge is discharged with an appropriate electrical-discharge route.
- (12) Power for the confirmation sensor is supplied to the hand check cable enclosed with the robot (or optional). If the cable end cannot be treated sufficiently due to this, the end could contact the peripheral device or robot arm while the power is turned ON, and could lead to short circuit accidents. Thus, always treat the end when using the hand check cable.

2.3.4 Teaching pendant

- (1) Tighten the connector of the teaching pendant cable. Don't pull or bend the cable with force.
- (2) Determine the area where the teaching pendant is stored, and prevent the pendant from being carelessly dropped thus causing malfunction or damage.

2.3.5 Grounding

- (1) Be sure to ground the robot and the controller electrically according to the instructions of the manual. The grounding is indispensable to prevent electric shock, to reduce electrostatic charges, to improve electric noise resistance, and to reduce electromagnetic interference.
- (2) Use a wire of more than 2 mm² in cross section, and make its length as short as possible.
- (3) The robot and the controller should be grounded separately. Keep the ground points away from those of other large electric equipment.

2.3.6 Emergency stop

- (1) Install a manual emergency stop switch at a location near the robot where it can be easily operated and connect it to the external emergency stop terminal of the controller. (NC contact, provided with a mechanical lock function. Compliant with IEC 60204-1 specifications.) When there are multiple installation places, install multiple switches. Refer to the instruction manual for the electrical specifications.
- (2) Install a switch on the safety protection devices, such as the safety fence door. Provide an interlock mechanism so that the robot will enter the emergency stop state if the switch is activated. (Example: The emergency stop state is entered when the safety fence door is opened during robot operation.)
- (3) In the case of the complex robot system designed to work together, emergency stop devices should stop not only the robot itself but also all relating equipment if its continued operation can be dangerous. In this case, for example, an emergency switch that has more than one contacts is desirable.

2.3.7 Safety stop

- (1) Install the stop switch near the robot where it can be operated easily. Connect it to the external input/ output terminal on the controller. When there are multiple installation places, install multiple switches. Refer to the instruction manual for the electrical specifications.
- (2) Do not install the stop switch on the safety protection devices, such as the safety fence door. Install an emergency stop switch on the safety protection device.
- (3) Do not enter the safety protection region (inside the safety fence) in the stopped state.

2.3.8 Indicators

- (1) Pertinent information should be provided such as clearly indicating robot working modes and displaying the reason for unprogrammed robot stop. For this purpose, use the dedicated I/O bits of the controller.
 - (e.g. run, wait, reset, error)
- (2) Where the risk may arise by a fault in the operation of unsupervised machinery, the machine must be equipped to give an appropriate acoustic or light signal as a warning.

2.3.9 Isolation of power sources

- (1) Each robot system must have means to isolate each of its power sources by manual operation.
- (2) Isolation must be either visible (visible interruption of continuity in the power supply) or visibly ensured by permitting a check of the position of the operating control on the isolating unit, and it must be made clear which areas of the machine are isolated.
- (3) If necessary, means should be taken to lock the isolation device in the 'OFF' or 'OPEN' position to prevent careless operation.
- (4) When the power is shut down, the hand drops down more or less by itself because no brakes are installed in the wrist axes. If this may lead to a hazardous condition, the attitude of the wrist should turn down beforehand or the power should be shut down timely to prevent from hazardous condition.
- (5) When the power to the robot is shut off, the hand, etc., may drop slightly from the time that the power is shut off to when the brakes activate. If there is any risk of interference, etc., with the peripheral devices, set the robot to a posture where a hazardous state will not be created before shutting off the power.

2.3.10 Applying power

- (1) Before turning on the power supply, check that there is no person within the safeguarded space and that tools and other pieces are not left there.
- (2) Verify that the cables, hoses, and connectors are not damaged nor disconnected nor loose.
- (3) Verify that the workpiece and the peripheral equipment are positioned as specified. Also verify that applying power to peripheral equipment does not result in hazardous motion.
- (4) If some sequence in applying power to peripheral equipment may cause a hazardous condition, obey the safety sequence specified in advance. (The situation is the same as in the power shut down.)
- (5) After applying power, be sure to verify that emergency stop devices and other safeguards are functional.
- (6) Verify that each axis of the robot moves functionally by job operation and is restricted in motion as intended.
- (7) Do not open the cover or door of controller, after turning on the power supply.

2.4 Teaching and programming

- (1) Wherever possible, programming must be performed with all persons outside the safeguarded space. When it is necessary to perform programming with personal in side the safeguarded space, safe working procedures must be provided and observed. This includes the following items.
 - (a) Operation method and procedure, including authorization of operator and suspension procedure of safeguards
 - (b) Speed of jog operation (Automatic operation is for bidden.)
 - (c) Signaling method for several workers
 - (d) Measure for emergency
 - (e) Measure to prevent malfunction
- (2) Where the automatic operation can be initiated by the teaching pendant, never select the automatic mode in the safeguarded space.
- (3) If performing teaching work in the safety protection region (inside the safety fence), always ensure complete control over the robot beforehand. (Always use "MANUAL mode" for the mode selector switch*1) connected to the controller (supplied by customer) and set the [T/B ENABLE] switch of the teaching pendant to "Enabled".)
 - Failure to so do could cause a very dangerous state as the robot could start with external commands.
- (4) When a key-type mode selector switch^{*1)} is prepared by customer and connected to the controller, when teaching, remove the key so that no one other than the teacher can change the mode.
- (5) When the [T/B ENABLE] switch of the teaching pendant is set to "Enabled", holding down the 3position enable switch on the back of the teaching pendant will turn ON robot servos, or releasing (or firmly pressing) the 3-position enable switch will turn OFF robot servos. (If the [T/B ENABLE] switch is disabled, the three-position switch will not operate.) When performing tasks that require turning ON robot servos, such as teaching the robot in the safety protection region (inside the safety fence), always set the [T/B ENABLE] switch to "Enabled" and hold down the 3-position enable switch. When performing tasks that can be done with robot servos OFF, such as modifying programs, or if a dangerous situation arises during the teaching process, release (or firmly press) the 3-position enable switch to turn OFF robot servos.
- (6) Suppress any device movement that could cause a hazard in the safety protection area (inside the safety fence), or make sure that only the teaching operator can control the device.
- (7) Assign a monitor during the teaching work so that the robot operation can be stopped immediately if any abnormality occurs. Make sure that the operators, other than the teaching operator, in the safety protection region (inside the safety fence) have a portable emergency stop switch or an enabling
- (8) Maintain sufficient illumination to produce an easy-to-work environment for the operators.
- (9) Be sure to mark the operators to wear proper clothing, safety shoes and helmets.
- (10) As an emergency countermeasure during teaching, don't face your back toward the robot, and be sure to maintain a passage to shelter.
- (11) The programmer must return the suspended safeguards to their original effectiveness prior to initiating automatic operation of the robot system.
- (12) After completing the teaching work, validate and safety protection devices that were temporarily invalidated, and recovery the original function. (Example: Validate the door interlock of the safety fence, etc.)

- (13) The robot arm or the robot controller may be hot after long operating hours. After long operating hours, never touch parts with hot surface marking.
- *1) The mode selector switch is attached as standard to the controller for the RV-35FR, RV-50FR, and RV-80FR series.

2.5 Program verification

- (1) After teaching and programming, always confirm the operation with step operation before starting automatic operation.
- (2) When confirming the operation inside the safety protection area (inside the safety fence), follow the predetermined work procedures in the same manner as the teaching work.
- (3) When a peripheral device is to start in synchronization with the I/O signal from the robot during the confirmation, take special care to the operation. As with teaching operation, suppress any device movement that could cause a hazard in the safety protection area (inside the safety fence), or make sure that only the operator can control the device.
- (4) When starting a program in the middle, be sure to avoid collision between the robot and the peripheral equipment.
- (5) If a program is long-sized and intricate, print out the content of the program and examine it in advance. Sufficient understanding is required before verifying such a program.

2.6 Automatic operation

- (1) Before initiating the automatic operation, ensure that there are no exposed persons in the safe-guarded space. If it is impossible, the control system must be designed and constructed so that an acoustic and/or visual warning signal is given whenever the machinery is about to start. The exposed person must have the time and the means to take rapid action to prevent the machinery from starting up. (e.g. installation of the emergency switches inside the safeguarded space)
- (2) Before initiating the automatic operation, be sure that all peripheral equipment is functional and there is no signals indicating malfunction.
- (3) Always start automatic operation outside the safety protection area (outside the safety fence). Even when resuming operation by resetting after stopping the robot with emergency stop, etc., during automatic operation, always start outside the safety protection area (outside the safety fence).
- (4) Before starting automatic operation, always confirm that the work details and selected program match. Use low-speed operation, when possible, until the first cycle ends.(Use the speed override change function.)
- (5) If any abnormality is observed in the robot or peripheral devices, stop the operation immediately. Note that if a new risk is posed due to the position where the robot is stopped, etc., take care to the timing for stopping the robot.
- (6) If the robot stops due to an unknown cause during automatic operation, avoid approaching the stopped robot. When the robot must be approached, input the emergency stop, or turn the main power off first. When turning the main power off, make sure that there will be no new risk caused.
- (7) When halting and resuming the program during automatic operation, make sure that there will be no new risk with the peripheral device when the program is started. (Adequacy of work start position, necessity of peripheral device initialization, etc.)
- (8) When the modification of the program is done during the suspension, be sure to verify the program at least one time before initiating the automatic operation.
- (9) When selecting a different operation speed with the speed override change function during automatic operation, make sure that there will be no new risk caused. (Risk from speed that is too fast, or too slow)
- (10) If a held workpiece or other object may fly out and cause a hazard by the centrifugal force during automatic operation or by the impact force of an emergency stop, suitable means must be taken to prevent such hazard.

- (11) When an emergency stop device is activated or the power is shut down, the hand drops down more or less by itself because no brakes are installed in the wrist axes. Also, when speed of the robot is fast, even the axis with a brake may not stop immediately because of its remaining power of speed. Prevent the hand from conflicting with peripheral equipment.
- (12) If the robot collides with a workpiece or the peripheral equipment at high speed due to e.g. a program error, then the workpiece, the peripheral equipment, the robot arm, and the reduction system of the robot may be considerably damaged. To avoid the hazardous condition caused by the collision, particular attention should be paid to assess the risks.

2.7 Maintenance

- (1) Where possible, maintenance of the robot and peripheral equipment should be performed from outside the safeguarded space.
- (2) When operations from outside the safety protection region (outside the safety fence) are not possible and work inside the fence is inevitable, turn off the power as a rule to avoid electric shock. At this time, make sure that no new risk will be caused by turning the power off.
- (3) When work must be carried out in the safety protection region (inside the safety fence) without turning the power off, always secure the priority right for the robot control. (Always use "MANUAL mode" for the mode selector switch*1) connected to the controller (supplied by customer) and set the [T/B ENABLE] switch of the teaching pendant to "Enabled".)
 - Failure to so do could cause a very dangerous state as the robot could start with external commands.
- (4) If the stored energy may cause a hazardous condition after shutting down the power, means must be provided for the controlled release of stored energy. This energy source may be in the from of (but not limited to) fluid pressure accumulators, capacitors, springs, counter balances, and flywheels. Appropriate label must be affixed to each stored energy source.
- (5) Do not open the controller door or cover immediately after turning the power off. Wait for the time given in the controller and instruction manual before opening the door or cover.
- (6) Be sure to place working notices on the power supply and start switches to prevent a third person from operating them carelessly. If necessary, provide a watchman to operate the emergency stop device immediately when the robot operators unexpectedly.
- (7) Securely carry out daily and periodic inspections referring to the operation manual. Regarding to the maintenance of the robot system, observe the inspection and maintenance program of the robot system manufacturer. If a skilled operation is needed for the robot itself, consult with our service shop.
- (8) When maintaining the controller, check the normal operation of the internal cooling fan by e.g. examining the air flow.
- (9) When the brakes are released, the robot will drop with its own weight, so make sure that there are no operators in the robot's movable range. If there is any risk of interference, etc., with the peripheral devices, set the robot to a posture where a hazardous state will not be created before releasing the brakes.
- (10) A small amount of lubricating grease may ooze out of the robot arm. If the surrounding environment could be contaminated from this grease dropping, check for grease oozing during the periodic inspection. If any grease is oozing out, wipe it off before it contaminates the surrounding environment.
- (11) For maintenance, provide a sufficient space of working and sufficient illumination to produce an easy-to-work environment for operators.
- (12) Don't modify the robot or use any unspecified parts. Be sure to prevent modifying any safety devices.
- (13) When turning on the power after completing the maintenance, ensure that the restoration of the power does not result in hazardous condition.
- (14) After completing the maintenance, the suspended safeguards must be returned to their original function. (e.g. interlocking guards must be functional.)
- (15) Do not carry out a megger test (insulation resistance test) during the inspections.
- (16) Do not short-circuit, charge, heat, incinerate or disassemble the battery.
- (17) The smell from grease that has been used for a long time may cause discomfort. Repair and lubricate the robot in a well-ventilated area. Do not put your face close to drained grease or the lubrication ports as they emanate an acrid smell.
- *1) The mode selector switch is attached as standard to the controller for the RV-35FR, RV-50FR, and RV-80FR series.

2.8 Trouble shooting

- (1) As with maintenance, consider whether the priority of the work can be set as (1) work outside the safety protection region (outside the safety fence), (2) work inside the safety protection region (inside the safety fence) with the power turned off,(3) work inside the safety protection region (inside the safety fence) with automatic operation canceled. If a person must work within the safety protection region (inside the safety fence), always use "MANUAL mode" for the mode selector switch *10 connected to the controller (supplied by customer) and set the [T/B ENABLE] switch of the teaching pendant to "Enabled".
- (2) Be sure to place working notices on the power supply and start switches to prevent a third person from operating them carelessly. If necessary, provide a watchman to operate the emergency stop device immediately when the robot operates unexpectedly.
- (3) If an alarm occurs on the robot, first check the alarm number or error mode which is useful is useful for trouble shooting. Record this information and refer to the corresponding pages of the manual.
- (4) If the content of trouble shooting exceeds the range of the user, consult with our service shop as far as the robot is concerned with the trouble.
- *1) The mode selector switch is attached as standard to the controller for the RV-35FR, RV-50FR, and RV-80FR series.

2.9 Modifications

- (1) Avoid modifications by user-judgements, and you must use the specified maintenance parts. Never modify the sections related to safety, such as the emergency stop.
- (2) Faults caused by modifications made by the user will not be covered by the warranty.

2.10 Disposal

- (1) Treat this unit as general industrial waste.
- (2) Do not disassemble the parts.
- (3) Dispose of batteries according to local laws.
- (4) Contact the Mitsubishi Service Dept. for collection of used grease. Disposal of used grease by the user will pollute the environment.

3 Safeguarding

Safeguarding includes the use of safeguards such as interlocking guards, awareness means in addition to the safe-guards, and safe working procedures to reduce the possibility of injury while performing an assigned task. Here, the guidance on safeguards and awareness means are provided for customers to check their safeguarding.

3.1 Safeguard

- (1) Fixed guards must be installed outside the maximum space of the robot.
- (2) Fixed guards must be constructed to withstand foreseeable operational and environmental forces.
- (3) Set the fixed guard to prevent entry into the safety protection region (inside the safety fence) from entrances other than those provided with an interlock device or presence detection device. (So that an operator cannot climb over, go under or get over the fence.)
- (4) Fixed guards must be permanently fixed in position and only be removable with the aid of a tool.
- (5) Fixed guards must be free of sharp edges and projections and must not themselves be a hazard.
- (6) The interlocking guards should be designed so that interlock prevents the robot system from automatic operation until the guard is closed. The closure of the a deliberate action at the control station.
- (7) The interlocking guard with guard locking should be designed so that the guard remains locked closed until the risk of injury from the hazard has passed or that opening the guard while the robot system is working gives a stop or emergency stop instruction. Where the hazard cannot be eliminated immediately by power interruption, the interlocking system must need to include a guard locking and/or a braking system.
- (8) When the operator's entire body can enter the safety protection region (inside the safety fence) from the door with interlock, install a device so that the door cannot be closed unintentionally.
- (9) The interruption, re-establishment after an interruption of fluctuation in whatever manner of the power supply to the safeguards must not lead to a dangerous situation.
- (10) Guards and protection devices must cause minimum obstruction to the view of the production process.
- (11) Guards and protection devices must enable essential work to be carried out on installation and/or replacement of tools and also for maintenance by restricting access only to the area where the work has to be done, if possible without the guard or protection device having to be dismantled.
- (12) Reestablishing the interlocked gate or presence sensing device field must not in itself restart automatic operation.
- (13) A presence sensing device must be installed and arranged so that persons cannot enter and reach into a hazardous area without activating the device or cannot reach the restricted space before the hazardous conditions have ceased.
- (14) Barriers used in conjunction with the presence sensing device may be required to prevent persons from bypassing the device.
- (15) The operation of presence sensing device must not be adversely affected by any of the environmental conditions for which the system was intended.
- (16) Resumption of robot motion must require the removal of the sensing field interruption. This must not be the control to restart automatic operation.
- (17) Where laser ray equipment or other harmful ray equipment is used, guards and protection devices must prevent any accidental radiation as well as reflections and diffusion that may damage health.

3.2 Awareness means

- (1) An awareness barrier must be constructed and installed so as to prevent inadvertent entry into the restricted space.
- (2) An awareness signal device must be constructed and located such that it must provide a recognizable audible or visual to persons of an approaching or present hazard.
- (3) When awareness signals in the from of light are used warn of hazards in the restricted space, sufficient devices must be used and located so that the lights can be seen by all persons in the proximity of the space.
- (4) Audible awareness devices must have a distinctive sound of greater intensity than the ambient noise level.

4 System documentation

The robot system documentation to be supplied by the robot system manufacturer shall contain the documents of all the components included in the system with their identification *e.g. robot, associated equipment, safeguards. (It shall also as a minimum include the following:

- (1) a clear, comprehensive description of the robot system and its installation including mounting and connection to external power sources;
- (2) a description of foreseeable hazardous conditions and how to avoid them;
- (3) a description *including interconnecting diagrams (of the safeguards, interacting function, and interlocking of guards with hazardous conditions particularly with interacting installation;
- (4) any further instructions for use specific to the system.

5 Training

Personal who perform maintenance or repairs on robot or robot systems must be trained in the procedures necessary to perform safely the required tasks. Therefore, the user must have an inspection and maintenance program and ensure those personnel are adequately trained and demonstrate competence to perform their include, but is not limited to, the following:

- (1) a review of applicable standard safety procedures and the safety recommendations of the robot manufacturer(s) and the robot system designers;
- (2) a clear definition of assigned tasks and responsibility of each person;
- (3) identification and explanation of all control devices and their functions used in performing the assigned task;
- (4) identification of the hazards associated with the assigned task;
- (5) the designated method(s) of safeguarding including the safe working procedures from the identified hazards:
- (6) the method for testing or otherwise ensuring the proper functioning of the safeguards and interlocks.

6 Degree of danger and damage, and indications

Warning labels, corresponding to the degree of danger and damage (refer to Table 6-1) are attached to the robot arm and controller. Fully understand the meaning of the warning label, and take special care when handling. Do not remove, modify or contaminate the warning labels.

Table 6-1:Degree of danger and damage, and indications

Level	Degree of danger and damage	Caution prompting symbol and signal term
DANGER	When there is a great risk that the operator could be subject to fatalities or serious injuries Note1) if handling is mistaken.	⚠ DANGER
WARNING	When the operator could be subject to fatalities or serious injuries Note1) if handling is mistaken.	<u> </u>
CAUTION	When the operator could be subject to injuries Note2) or when only physical damage Note3) could occur if handling is mistaken.	♠ CAUTION

- Note1) Serious injury refers to injuries with after effects such as blindness, injury, burns (high temperature, low temperature), electric shocks, bone fracture, and poisoning, and to injuries requiring hospitalization or long-term medical treatment.
- Note2) Injury refers to injuries, burns and electric shocks that do not require hospitalization or long-term treatment.
- Note3) Physical damage refers to extended damage to buildings, peripheral devices or workpieces.

7 Remedies of failures and actions to take in an emergency

7.1 Prohibition of use in a faulty or abnormal condition



When you notice any sign of failure or anything wrong, immediately stop operation and turn off the power as needed. If you notice any strange smell or smoke, turn off the power and disconnect the power plug.

Using the product in a faulty or abnormal condition is extremely dangerous and may cause serious damage to the equipment and peripherals.

Moreover, take precautions to avoid burn injury from the consequent heating of the equipment.

7.2 Actions to take in an emergency



When you notice any sign of failure or anything wrong, refer to the "Troubleshoot-

If the remedies do not work or an unknown problem occurs, contact your local sales representative or the Mitsubishi Service Dept. and follow their instructions.

8 Examples of safety protection device configuration

Appendix 8-1: Safety protection device configuration methods

(1) Stop functions

The following three methods are available for the stopping methods, a basic means of safety protection.

•	•
Emergency stop	The robot's drive power is directly shut off and the robot immediately stopped by the relay wire circuit "opening" operation (B contact) without passing through software or IC (Integrated Circuit.) An excessive force may be applied on the robot during high-speed operation.
Deadman stop	If the [T/B ENABLE] switch on the teaching pendant is set to "Enabled", when the switch is released, the robot's drive power is directly shut off and the robot immediately stopped by the relay wire circuit "opening" operation (B contact) without passing through software or IC (Integrated Circuit). An excessive force may be applied on the robot during high-speed operation.
Servo OFF	The input signal is judged by the software, the motor power is shut off, and the motor stopped. During operation, the motor will decelerate to a stop before the servo is turned OFF, so it may take some time before the stopping is completed.

The other stop functions (emergency stop, temporary stop, etc.) are used to judge the input signal by the software and stop the operation. These are used to confirm the operation status, etc., but since the power is not shut off, these do not act as stop functions for safety protection.

(2) Safety protection functions

The following functions can be used for the safety protection devices.

Safety speed limiter	This sets the high-speed operation speed with the operation panel, etc. This function limits the speed to a safe speed.
Exclusive starting control	This prohibits the start command from a source other than the device being used.

The following functions are also available as safety protection assembled in the product. These functions are already assembled in the teaching box, and will function as safety protection functions without special consideration.

- (1) Hold to runThis function starts operation only when the key, etc., is pressed. Operation stops when released.
- (2) Double key pressing . This function validates the commands only when two keys are pressed simultaneously.

(3) Safety protection measures

Measures for safety protection using the above stop functions and safety protection functions are indicated below, together with the correspondence to Occupational Safety and Health Laws.

Measure A: Servo OFF

Measure B: State in which emergency stop can be applied immediately (teaching pendant emergency stop,

emergency stop switch inside fence, etc.)

Measure C: Safety speed limiter, exclusive starting control (teaching pendant enable, manual mode, etc.)

Movable range	Operation status	Drive source shut off	Measures	Corresponding Provisions
Outside	During automatic operation	Not shut off	Signaling of operation start Provision of fences and enclo- sures	Article 104 Article 150, Clause 4.
Inside	During teaching, etc	Shut off Measure A	Indication that work is in progress	Article 150, Clause 3.
		Not shut off	Measures to stop operation immediately, etc. Measure B and Measure C	Article 150, Clause 3, etc.
	During inspections, etc.	Shut off Measure A	Indication that work is in prog- ress with operation stopped, etc. Indication that work is in prog- ress	Article 150, Clause 5.
		Not shut off	Measures to stop operation immediately, etc. Measure B and Measure C?	Article 150, Clause 5, etc.

Appendix 8-2: Examples of safety protection device configuration

An example of the safety protection device configuration is shown below. Refer to the instruction manual of each type at the connection.

(1) Examples of safety measures (CR800 controller)

Two emergency-stop input circuits are prepared on the user wiring terminal block of the controller. (Appendix Fig. 8-1)

Create a circuit as shown below for safety measures. (Appendix Fig. 8-3 to Appendix Fig. 8-6) In addition, the figure shows the normal state which is not in the emergency stop state.




In the emergency-stop related wiring by the customer, if the coil (is not the contact points) of the relay prepared by the customer is connected to the controller, please be sure to implement the measure against the noise by the customer in the coil section. And, please also take the lifetime of noise suppression parts into consideration.



Electric specification of the emergency-stop-related output terminal: 24V DC/100 mA or less




In the customer's system, do not ground the + side of 24V power supply prepared by customer for connect to the controller. (related with emergency stop and parallel input/output) If it connects with the controller under the condition that the + side is grounded, it will lead to failure of controller.

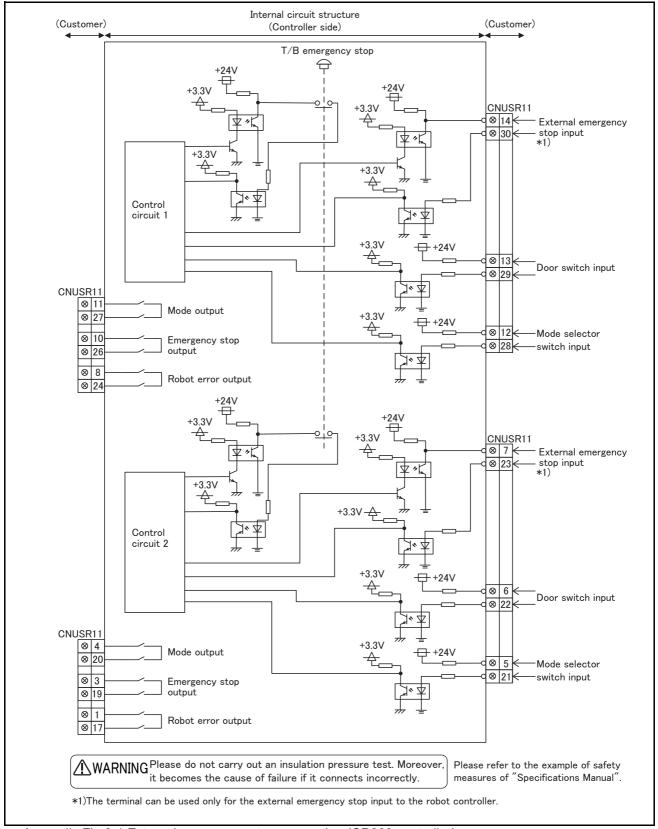



Appendix Fig.8-1:External emergency stop connection (CR800 controller)

⚠ CAUTION

Place the emergency stop switch in an easily operable position, and be sure to wire it to the emergency stop correctly by refer to Appendix Fig. 8-3 to Appendix Fig. 8-6. This is a necessary measure in order to ensure safe operation so that the robot can be stopped immediately by pressing the emergency stop switch in the event that the robot malfunctions.

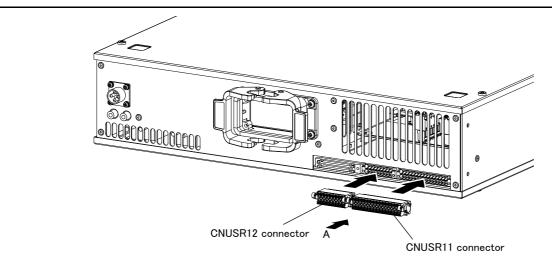

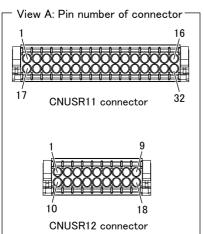

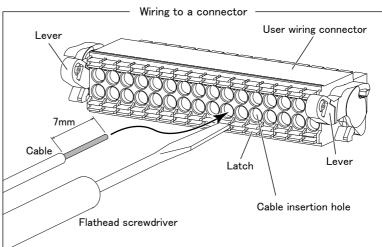

Connection procedure

Wire cables to the CNUSR11 and CNUSR12 user wiring connectors (attachment), and fit them into the corresponding connectors (ports) located on the rear side of the controller.

The customer needs to prepare the following items.

- Cable: AWG24 to 16 (0.2 to 1.5mm²)
- Flathead screwdriver: The width of the tip is 2.5mm.
- 1) Prepare the user wiring connector (attachment).
- 2) Strip off 7 mm of the cable sheath.
- 3) Insert the cable all the way in the insertion hole while pressing down the latch on the user wiring connector with a flatblade screwdriver.
- 4) When all the required wirings have been completed, fit the user wiring connector (CNUSR11/CNUSR12) into the corresponding connector (CNUSR11/CNUSR12 port) on the controller.
- 5) When the user wiring connector has properly fitted, the levers on both sides of the connector rise and the connector is fixed. (To dismount the connector, lower the levers.)

Appendix Fig.8-2:Wiring method to the user wiring connector (CNUSR11/CNUSR12 of CR800 controller)



Fully check the number of the cable insertion hole (connector pin number) for incorrect connection. Incorrect wiring may damage the robot or cause a malfunc-



CAUTION When wiring to the CNUSR11/CNUSR12 connector, pay attention to fraying wires of the core wires. The fraying wires can come into contact with the adjacent terminal, causing a short circuit.

Do not apply solder on core wires. may cause a contact failure.

<Wiring example 1>: Connect the emergency stop switch of peripheral equipment to the controller. The power supply for emergency stop input uses the power supply in the controller. <Operation of the emergency stop> If the emergency stop switch of peripheral equipment is pushed, the robot will also be in the emergency stop state. Emergency stop switch (2-contact type)
Peripheral T/B emergency stop button <u>equippmen</u>t Internal power supply 24V *1 CNUSR11 +24V +3.3V 14/7 30/23 Safety fence +3.3V-A +24V 13/6 Door switch input 29/22 Mode selector switch input 12/5 28/21 Internal emergency stop circuit 10/3 26/19] Emergency stop output 11/4 27/20] Mode output Error output 24/17江 *1) The CNUSR11 connector is a two-level terminal block, indicating that there are two circuits (channels). Two terminals (cable insertion holes) need to be used for one circuit. *2) The T/B emergency stop button connected with the controller.

Appendix Fig.8-3:Example of safety measures (CR800 controller wiring example 1)


<Wiring example 2>: Connect the emergency stop switch, and door switch of peripheral equipment to the controller.

The power supply for emergency stop input uses the power supply in the controller. Monitor the emergency stop state by the peripheral equipment side.

<Operation of the emergency stop>

If the emergency stop switch of peripheral equipment is pushed, the robot will also be in the emergency stop state.

When the controller power is OFF, the peripheral devices are in the emergency stop state.

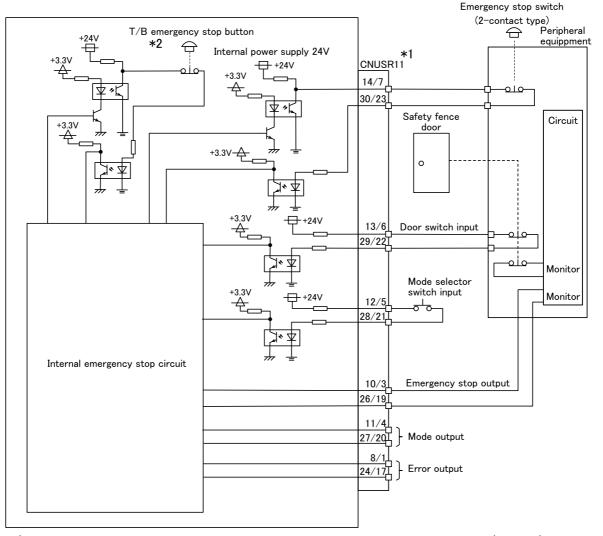


*1) The CNUSR11 connector is a two-level terminal block, indicating that there are two circuits (channels). Two terminals (cable insertion holes) need to be used for one circuit.

Appendix Fig.8-4:Example of safety measures (CR800 controller wiring example 2)

^{*2)} The T/B emergency stop button connected with the controller.

< Wiring example 3>: Connect the emergency stop switch of peripheral equipment, and the door switch to two controllers, and it interlocks. The power supply for emergency stop input uses the power supply in the controller. Monitor the emergency stop state by the peripheral equipment side. <Operation of the emergency stop> If the emergency stop switch of peripheral equipment is pushed, the robot will also be in the emergency stop When the controller power is OFF, the peripheral devices are in the emergency stop state. T/B emergency stop button \ominus Internal power supply 24V *1 CNUSR11 +24V +3.3V 14/7 30/23 Circuit +3.3V-A 13/6 Door switch input ملو Mode selector switch input 12/5 Internal emergency stop circuit 10/3 Emergency stop out 11/4 27/204 Mode output 24/17 Error output T/B emergency stop button *2 \hookrightarrow Internal power supply 24V *1 CNUSR11 +24V +3.3V 14/7 +3.3V-- Door switch input Mode selector switch input 12/5 28/2 Internal emergency stop circuit 10/3 26/19 Monito 11/4 27/20 Mode output Error output *1) The CNUSR11 connector is a two-level terminal block, indicating that there are two circuits (channels). Two terminals (cable insertion holes) need to be used for one circuit. *2) The T/B emergency stop button connected with the controller.

Appendix Fig.8-5:Example of safety measures (CR800 controller wiring example 3)

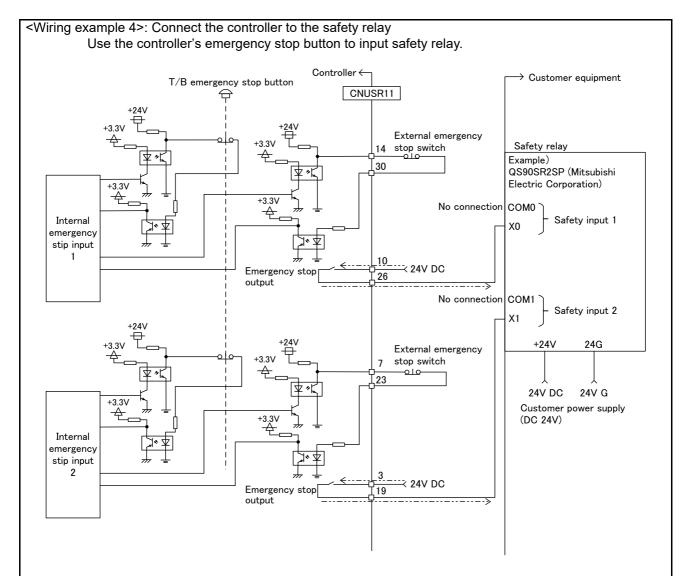

[Caution]

- 1) Setup a safety relay on the user equipment, and when using to input the emergency stop button on the controller, please only use a safety relay that functions when connecting the input to the one end of the 2 systems (i.e. QS90SR2SP (Manufacture: Mitsubishi Electric Corporation)).
- 2) When connecting emergency stop button output to an exterior safety relay, please take note of the polarity and make sure that the electrical current flows in the same direction as indicated by the dotted arrows in the two places in the diagram. If the polarity is setup incorrectly this function will not operate correctly. Please connect 3 and 10 terminal of CNUSR11 connector to 24V.

Appendix Fig.8-6:Example of safety measures (CR800 controller wiring example 4)

(2) Examples of safety measures (CR860 controller)

The controller's dedicated I/O terminal connector has a duplicate emergency stop circuit (Appendix Fig. 8-7). Appendix Fig. 8-9 to Appendix Fig. 8-13 are examples of safety measures. Refer to these figures when creating safety measures. The figures represent systems which are operating normally (i.e. Systems not in an emergency stop state).



 $ackslash \mathsf{WARNING}^{}$ Do not carry out a dielectric withstand voltage test. Moreover, incorrect connection may cause a malfunction.

/!\CAUTION

In the process of wiring customer's emergency stop-related products, if connecting the coil (not a contact) of the relay supplied by customer to the controller, be sure to take preventive measures against surge in the coil section. Moreover, take the service life of surge protective devices into consideration.

/I\ CAUTION Electrical specifications of the emergency-stop-related output terminal: 24V DC or less, rated 100mA


∠!\ CAUTION

Do not ground the + side of the customer device's 24V power supply for input/output (emergency stop and parallel I/O) that is used to connect the controller. Connecting the controller with the + side grounded may cause a failure of the controller.


/!\ CAUTION

Place an emergency stop switch in an easily operable position, and be sure to wire the switch to the emergency stop terminal by referring to Appendix Fig. 8-9 to Appendix Fig. 8-13.

This measure is required to ensure safety by pressing the emergency stop switch to stop failed robots immediately.

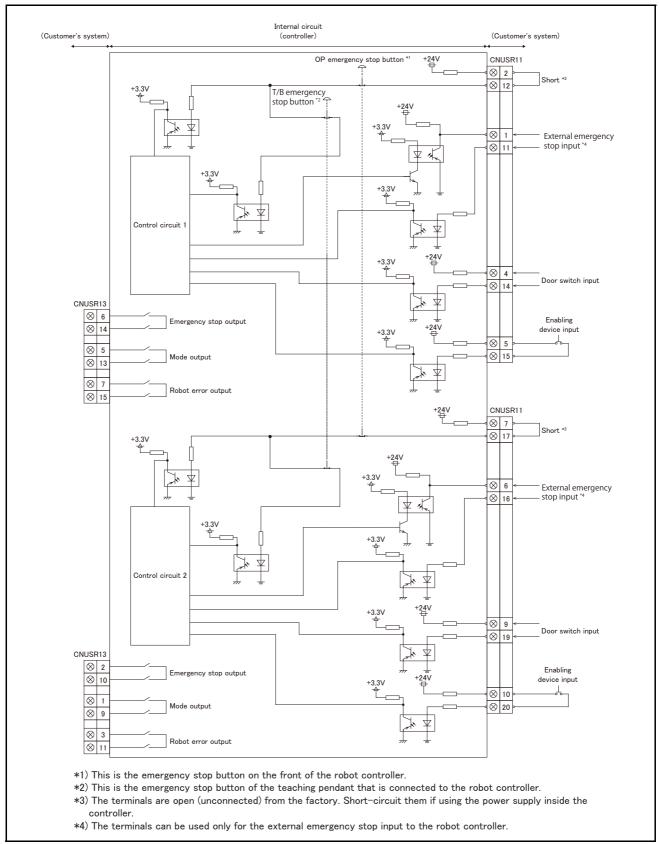


Appendix Fig.8-7:External emergency stop connection (CR860 controller)

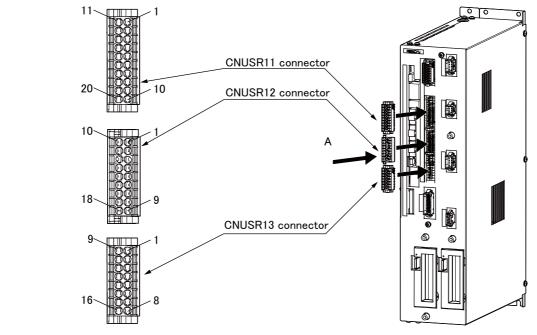

Enlarged view A: Connector pin numbers

Enlarged view of the R800CPU unit

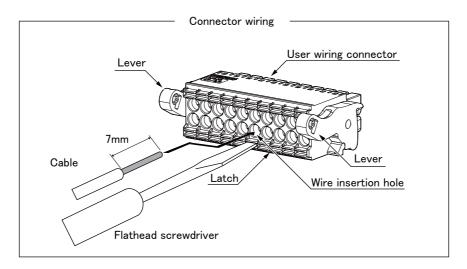

Connection procedure

Wire cables to the user wiring connector (attachment) and attach the connector to the CNUSR11, CNUSR12, or CNUSR13 port on the R800CPU unit.

The customer needs to prepare the following items.

- Cable: 24 to 16 AWG (0.2 to 1.5mm²)
- Flathead screwdriver: The width of the tip is 2.5mm.
 - 1) Prepare the user wiring connector (attachment).
 - 2) Strip off 7mm of the cable sheath.
 - 3) Insert the cable all the way into the insertion hole, pressing down the latch on the user wiring connector with a flathead screwdriver.
- 4) Once wiring is complete, attach the user wiring connector to the corresponding port (CNUSR11/CNUSR12/CNUSR13) on the R800CPU unit.
- 5) Inserting the connector completely will lift the levers on both sides of the connector and fix the connector. (To remove the connector, move the levers down.)

Appendix Fig.8-8:Wiring method to the user wiring connector (CNUSR11/CNUSR12/CNUSR13 of CR860 controller)



CAUTION To prevent incorrect wiring, carefully check the numbers of the cable insertion hole (connector pin numbers). Connecting a cable to the wrong hole may cause a failure or error of the robot.



When wiring the CNUSR11, CNUSR12, or CNUSR13 connector, pay attention to fraying wires of the core wires. The fraying wires can come into contact with the adjacent terminal, causing a short circuit.

Do not apply solder on core wires. Doing so may cause a contact failure.

Wiring example 1>: Connect the emergency stop switch of the peripheral equipment.


The power used for emergency stop detection is supplied via the internal power supply of the controller. This wiring example shows that the input circuit of the external emergency stop input is provided separately.

In this circuit, when the safety diagnosis function is enabled, the external emergency stop input complies with SIL3, PLe/Category 4.

(If the safety diagnosis function is disabled, the external emergency stop input complies with SIL2, PLd/Category 3.)

<Operation of the emergency stop>

Pressing the emergency stop switch on the peripheral equipment will also bring the robot to an emergency stop.

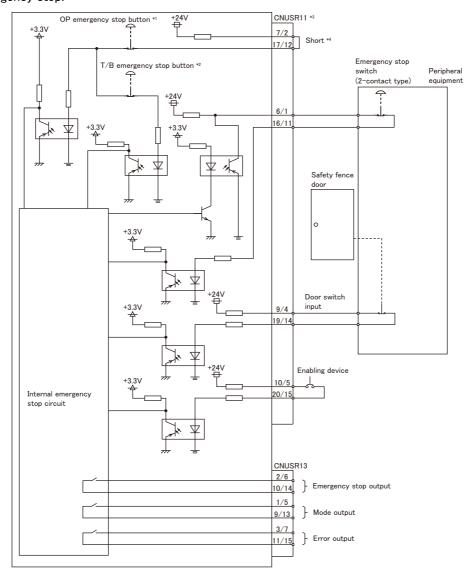

- *1) This is the emergency stop button on the front of the robot controller.
- *2) This is the emergency stop button of the teaching pendant that is connected to the robot controller.
- *3) The CNUSR11 connector has two rows of terminals, indicating that there are two channels. Both channels must be connected.
- *4) The terminals are open (unconnected) from the factory. Short-circuit them if using the power supply inside the controller.

Appendix Fig.8-9:Example of safety measures (CR860 controller wiring example 1)


Wiring example 2>: Connect the emergency stop switch of the peripheral equipment.

The power used for emergency stop detection is supplied via the internal power supply of the controller. This wiring example shows that the OP emergency stop, T/B emergency stop, and external emergency stop switches are connected on one path.

In this circuit, the safety function complies with SIL2, PLd/Category 3.

<Operation of the emergency stop>

Pressing the emergency stop switch on the peripheral equipment will also bring the robot to an emergency stop.

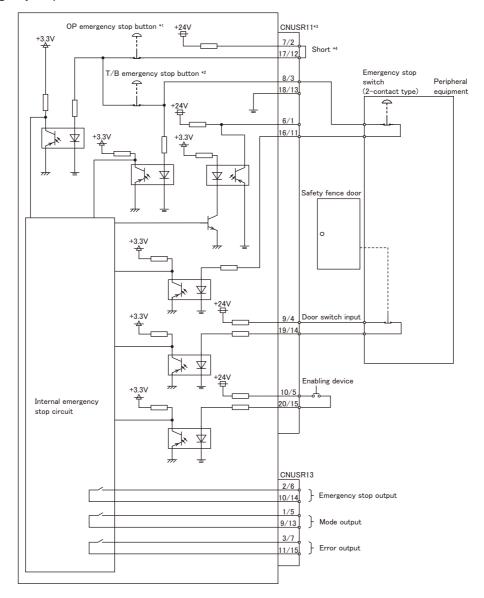

- *1) This is the emergency stop button on the front of the robot controller.
- *2) This is the emergency stop button of the teaching pendant that is connected to the robot controller. If the button is connected as shown in this diagram, it is not possible to remove the teaching pendant from the controller without generating an emergency stop alarm. When the devices are connected as shown in this diagram with the T/B removed, attach a dummy connector (sold separately) to the T/B connection port.
- *3) The CNUSR11 connector has two rows of terminals, indicating that there are two channels. Both channels must be connected.
- *4) The terminals are open (unconnected) from the factory. Short-circuit them if using the power supply inside the controller.

Appendix Fig.8-10:Example of safety measures (CR860 controller wiring example 2)

Wiring example 3>: Connect the peripheral equipment's emergency stop switch, door switch, and enabling device.

The power used for emergency stop detection is supplied via the peripheral equipment. The emergency stop state is monitored via the peripheral equipment.


This wiring example shows that the OP emergency stop, T/B emergency stop, and external emergency stop switches are connected on one path.

In this circuit, the safety function complies with SIL2, PLd/Category 3.

<Operation of the emergency stop>

Pressing the emergency stop switch on the peripheral equipment will also bring the robot to an emergency stop.

Even if the controller is powered off, pressing the emergency stop switch of the controller or teaching pendant can bring the peripheral equipment to an emergency stop state.

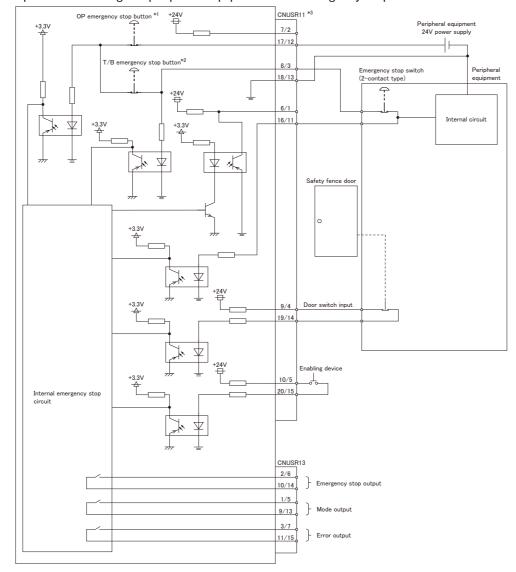

- *1) This is the emergency stop button on the front of the robot controller.
- *2) This is the emergency stop button of the teaching pendant that is connected to the robot controller. If the button is connected as shown in this diagram, it is not possible to remove the teaching pendant from the controller without generating an emergency stop alarm. When the devices are connected as shown in this diagram with the T/B removed, attach a dummy connector (sold separately) to the T/B connection port.
- *3) The CNUSR11 connector has two rows of terminals, indicating that there are two channels. Both channels must be connected.

Appendix Fig.8-11:Example of safety measures (CR860 controller wiring example 3)

Wiring example 4>: Connect the peripheral equipment's emergency stop switch and door switch to two controllers for interlocking.


The power used for emergency stop detection is supplied from the controller.

The emergency stop state is monitored via the peripheral equipment.

<Operation of the emergency stop>


Pressing the emergency stop switch on the peripheral equipment will also bring the robot to an emergency stop.

When the controller power is off, the peripheral devices are in the emergency stop state.

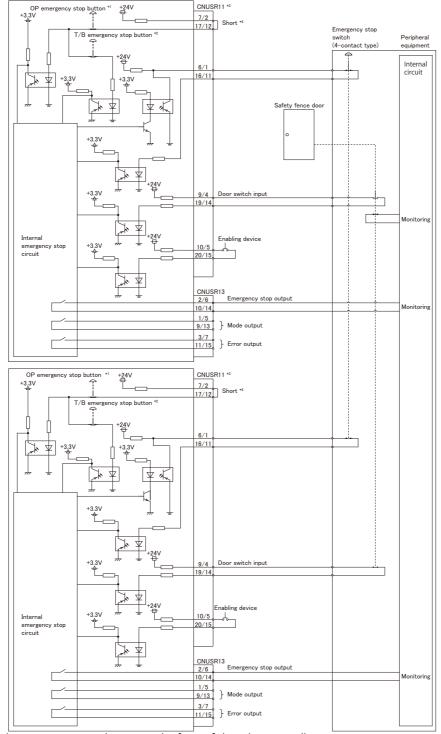

- *1) This is the emergency stop button on the front of the robot controller.
- *2) This is the emergency stop button of the teaching pendant that is connected to the robot controller.
- *3) The CNUSR11 connector has two rows of terminals, indicating that there are two channels. Both channels must be connected.
- *4) The terminals are open (unconnected) from the factory. Short-circuit them if using the power supply inside the controller.

Appendix Fig.8-12:Example of safety measures (CR860 controller wiring example 4)

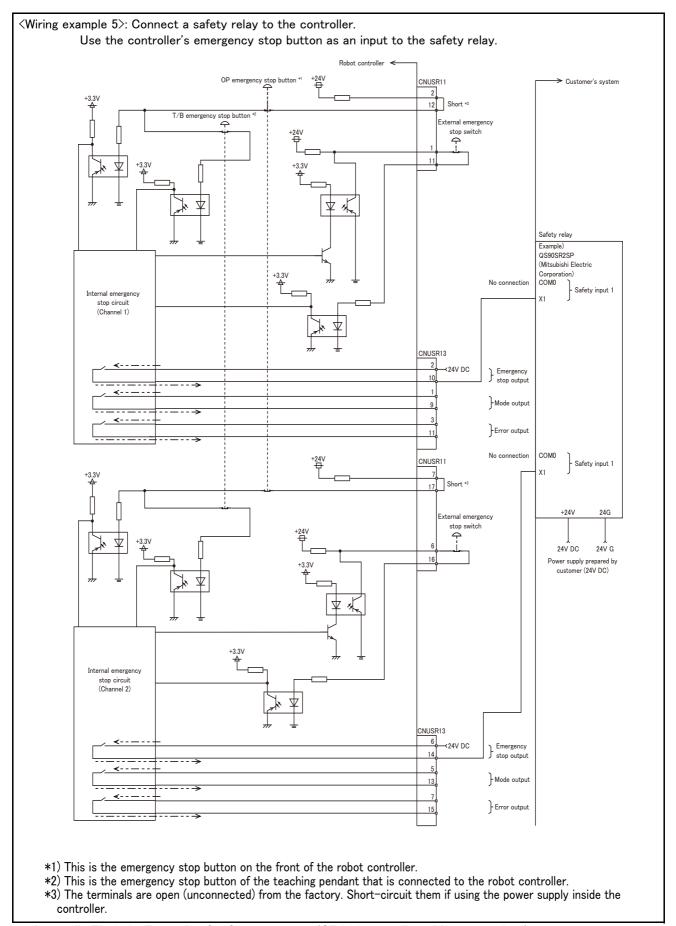

Appendix Fig.8-13:Example of safety measures (CR860 controller wiring example 5)



CAUTION When connecting a safety relay to the system and using the emergency stop button of the controller as an input to the relay, select a safety relay that functions when a signal is input to either one of the two inputs. (Example: QS90SR2SP manufactured by Mitsubishi Electric Corporation)



When connecting the output of the emergency stop button to an external safety relay, set the polarity so that the electric current flows in the direction as indicated by the dotted arrows in the wiring diagram below. If the polarity is set incorrectly, this function will not operate correctly. Connect a power supply of 24V to terminals 2 and 6 of the CNUSR11.

8Examples of safety protection	device configuration



MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN